

#6888 REMOTE OPERATION GUIDE



LOCK BUTTON

• Press and release the LOCK button to ARM ALARM and LOCK DOORS	Ignition must be OFF
• Press and release the LOCK button to LOCK DOORS	During Valet Mode
• Press and release LOCK button and press it again for 2 SECONDS to BYPASS SHOCK SENSOR and ARM ALARM (Use this to bypass shock sensor)	Ignition must be OFF



UNLOCK BUTTON

• Press and release the UNLOCK button to DISARM ALARM and UNLOCK DOORS	Alarm must be ARMED and Ignition OFF
• Press and release the UNLOCK button to STOP ALARM TRIGGER	When siren / horn is Sounding
• Press and release the UNLOCK button to UNLOCK DOOR	During Driving or Valet Mode
• Press and Hold the UNLOCK button for 2 SECONDS to switch ALARM to KEYLESS basic mode.	Alarm must be DISARMED and Ignition ON.



PANIC BUTTON

- Press and hold the PANIC button for 2 SECONDS to TRIGGER HORN / SIREN



2nd AUXILIARY

- Press LOCK and PANIC buttons together to get AUX2 Output.
Note: Contact installer to make sure this option is enabled.



AUX BUTTON

 
• Press and release the AUX button for TRUNK RELEASE	
• Press and hold the AUX button for 2 SECONDS for SILENT ARMING and Lock Doors	Alarm must be DISARMED and ignition OFF
• Press and hold the AUX button for 2 SECONDS for SILENT DISARMING and Unlock Doors	Alarm must be ARMED and ignition OFF

VALET OVERRIDE SWITCH OPERATION

- USED FOR:**
1. Stopping horn/siren: Turn ignition on, press and hold valet switch until horn/siren stops.
 2. To enter/exit keyless basic mode (LED steady on): Ignition on and hold valet switch for 5 seconds.
 3. Use to program remotes: Turn ignition on, press and release valet switch 5 times, press lock buttons on each remote to be programmed, turn ignition off. Up to 4 remotes may be programmed.

Most Common Locations (Ask installer where it is located.)

- Inside glove compartment, driver's kick panel, behind the fuse panel access door, underneath the dashboard in front of the driver.



REPLACEMENT REMOTE PART NUMBER: #REMOTE-6888

THIS IS ONLY A GUIDE

The button operations shown are a general guide. Consult with the dealer that installed your keyless entry to confirm these remote functions.

©2011 Micro Alarm Systems, Inc. • 6888-Op-oct2011.indd