



BARRACUDA™

EX88HV

REMOTE OPERATION GUIDE

 <p>LOCK</p> <p>Press and release "Lock" button to activate alarm and lock doors</p>	 <p>SILENT MODE</p> <p>Press and release the "Lock" and "Unlock" buttons to activate alarm Silent Mode, no siren chirp, only parking light will flash</p>
 <p>UNLOCK</p> <p>Press and release "Unlock" button to deactivate alarm and unlock doors</p>	 <p>SENSOR DEFEAT</p> <p>Press the "Lock" button, within 3 seconds press the "Lock" and "Unlock" buttons for 2 seconds to activate Sensor Defeat</p>
 <p>AUX</p> <p>Press and release the "AUX" button to provide a momentary output</p>	 <p>DEACTIVATE SENSOR DEFEAT</p> <p>Press "Unlock" button to deactivate Sensor Defeat</p>
 <p>PANIC</p> <p>Press and hold the "Panic" button for 2 seconds to activate panic mode</p> <p>NOTE: Press "Unlock" to stop panic mode</p>	 <p>HI-JACK ENABLE</p> <p>Press the "Panic" button for 2 seconds to activate Hi-Jack mode with IGN. on</p>
 <p>AUX#2</p> <p>Press and hold the "Unlock" button for 2 seconds or longer to provide an output for as long as pressed</p>	 <p>HI-JACK DISABLE</p> <p>Press the "Unlock" button to deactivate Hi-Jack mode with IGN. on</p>

REPLACEMENT REMOTE PART NUMBER: #REMOTE-EX88HVCARB
THIS IS ONLY A GUIDE

The button operations shown are a general guide. Consult with the dealer that installed your keyless entry to confirm these remote functions.

©2011 Micro Alarm Systems, Inc. • EX88HV-OP-20110118.indd